

Hikvision DVR

How to BURN CCTV footage

Follow the steps from the **PLAYBACK** instructions to establish the incident you wish to burn to USB stick.


IMPORTANT

1: Insert an empty USB Stick into the front USB drive.

Choose the camera/s you want to burn by placing a tick beside it.
Cameras are listed on the right side of the screen

In the PLAYBACK MENU, pause at the start of the incident.

Choose the CUT ICON  and this will mark the START of the incident.

Move to the END of the incident and again choose the CUT ICON  this will mark the end of the incident.

When the Start & End of the incident have been marked, choose the SAVE Icon 

A MENU will appear displaying the cameras you have chosen to burn
(make sure there is a tick beside the appropriate cameras)
eg. Camera 8 = ☒A8

Choose **EXPORT**

1. A box appears with 2 options : ☒ Player
☐ Video & Log

You must put the **PLAYER** onto the USB so that the footage can be played from any PC. Choose **PLAYER** and OK.

Choose **EXPORT**

2. A box appears with 2 options : ☐ Player
☒ Video & Log

The footage will burn to the USB this time. Choose OK

To exit press **EXIT**.
You will be asked if you want to save the clips - Say **NO**.